



# X-LIGHT SERIES INSTALLATION INSTRUCTIONS

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Follow all NEC guidelines and local electrical codes.

**NOTE:** Use Garden Light LED transformers only - Garden Light LED will not repair or replace under warranty any luminaires or drivers that have been damaged as a result of using other manufacturer's equipment. **LISTED FOR OUTDOOR USE ONLY**

This Garden Light LED luminaire uses LED technology that has an operating voltage range of 10.5 - 18 Volts AC. Garden Light LED recommends using a 15 Volt tap.

**WARNING - RISK OF ELECTRIC SHOCK:** This luminaire must not be installed within 10FT (3.05m) of a pool, spa or fountain.

Low voltage wire is intended for shallow burial only and should be at a maximum depth of 6 inches (152mm).

Garden Light LED  
800-511-2099  
www.gardenlightled.com

## LUMINAIRE INSTALLATION (see Figure 1.)


1. To prevent electrical shock, unplug transformer from the electrical outlet before installation or service of Luminaire or Driver.
2. Pre-drill the surface that the Luminaire will be mounted to.
3. Ensure there is a cavity or single gang junction box in or under the mounting surface to house the wire connections between the luminaire and the main supply lines.
4. Remove the two screws holding the luminaire cover onto the base of the luminaire and put aside in a safe place.
5. Strip the two Luminaire Leads to the appropriate length and attach them to the Main Supply Lines using Listed Wet Location Wire Connectors.
6. Using the supplied screws, mount the luminaire base to a flat surface.
7. Once the luminaire base is securely mounted, the cover shall be reinstalled to the base using the two screws put aside in Step 4.

### NOTE:

High-powered pressure washers should not be used directly on the luminaire.

Do not drive directly over the luminaire with heavy machinery that has solid wheels or tracks / treads.

If you have any questions regarding installation or Garden Light LED luminaires, please call 800-511-2099 and our knowledgeable staff will assist you.

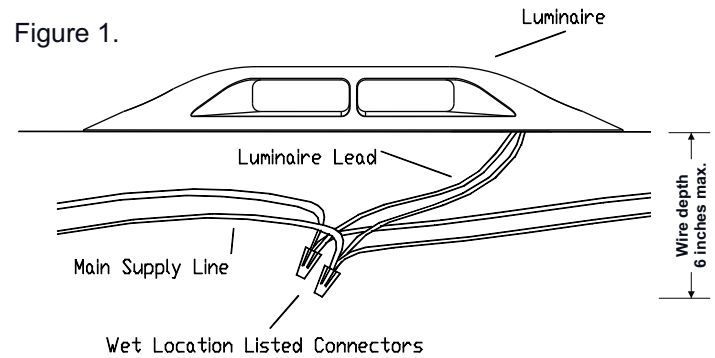

**IF INSTALLED IN A MANNER NOT OUTLINED IN THIS DOCUMENT, FACTORY WARRANTY MAY BE VOID.**

### NOTES:

Garden Light LED Drivers self-regulate to keep the LED brightness the same throughout the entire voltage range, ensuring a consistent output among Luminaires. It is not necessary to balance the voltage to each Luminaire.

\*\*\*Use only wire connectors Listed for wet locations. Contact Garden Light LED for suitable connectors. (800-511-2099)

\*\*\*If additional wire is needed to connect the Luminaire to the low voltage transformer, contact Garden Light LED. (800-511-2099)

## DRILL TEMPLATE on the back side.

# DRILL TEMPLATE

OUTER DIMENSION IS THE TOP

